
1. Unpack the luminaire.



2.Excavate a hole with a diameter of 340 mm and a minimum depth of 280 mm.Fill the bottom with a gravel layer at least 100 mm deep, or prepare a concrete base. Ensure adequate drainage; in clay soil, install a drainage system.

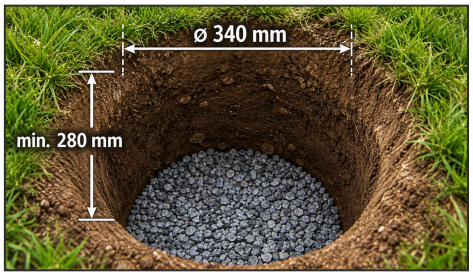

3. Loosen the frame screws, then remove the luminaire body from the housing.



4.Place the luminaire housing into the prepared opening.
Check that it is level and correctly oriented.




5. Backfill around the luminaire housing with suitable material or encase it in concrete.



6. Set the desired tilt angle within the range of ±15° using the locking screw.



7. Connect the 3 core cable to the power supply.
Ensure the cable connection is watertight and rated Ip68.

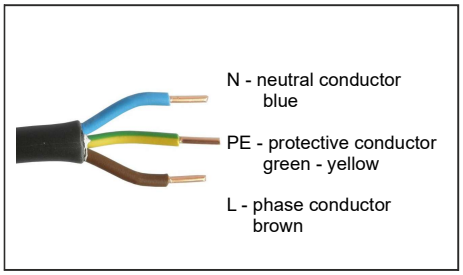



8. Reinsert the luminaire into the housing.



9. Tighten the frame screws to a torque of 4.0 Nm.



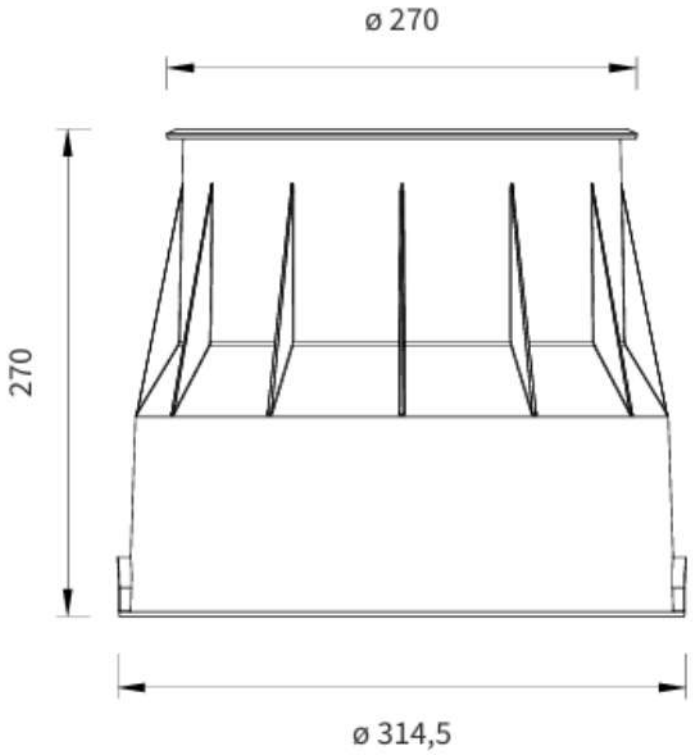

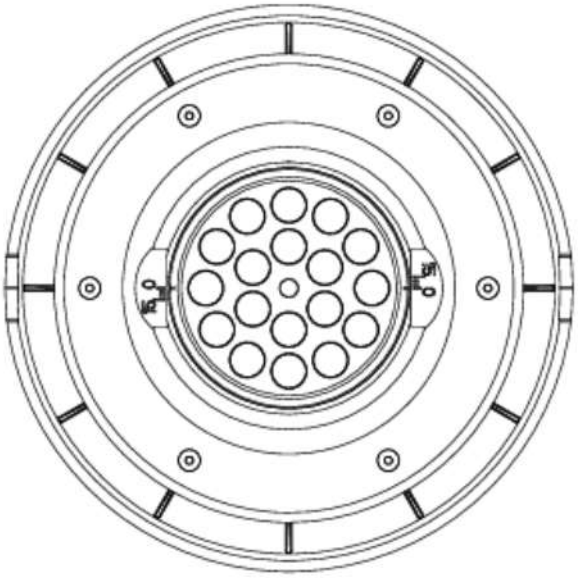

= 6,2 kg

- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

- Caution, risk of electric shock


- Do not look directly or with optical aids into the light source RG1 d > 0,5 m



- This luminaire operates at mains voltage 220-240V, 50-60 Hz.

Any modification to this luminaire is forbidden.

- Replace any cracked protective shield.



Cleaning:
clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

Instalation and maintainance:
can provide only a person with an electrical qualification.



ELEKTRO-LUMEN, s. r. o.
Hranická 505
753 61 Hranice IV - Drahotuše
Česká republika

Telefon: +420 581 699 411
Fax: +420 581 699 419
E-mail: el-lumen@el-lumen.cz
Web: www.el-lumen.cz

The company reserves the right to change technical data and printing errors.
Copyright © ELEKTRO-LUMEN, s. r. o.